Outdoor and Indoor Electric Refrigerator Model

COAR

USER'S MANUAL

3029079

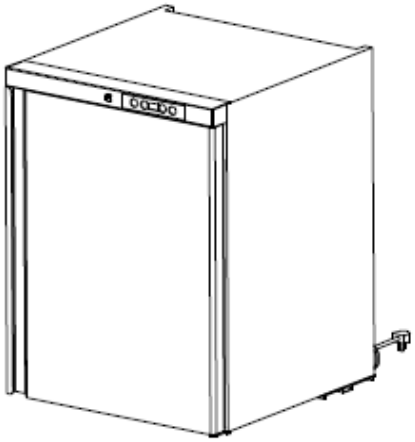

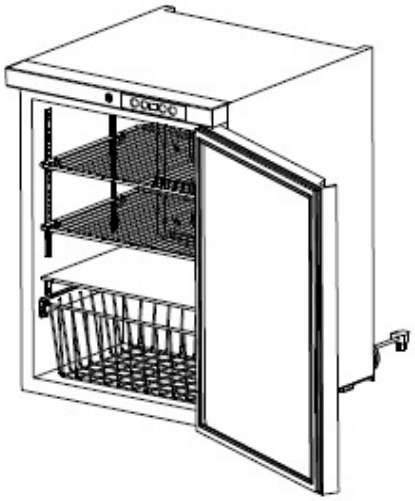

COAR

PLEASE READ THE MANUAL THOROUGHLY PRIOR TO EQUIPMENT SET-UP, OPERATION AND MAINTENANCE.

INSTALLATION

IMPORTANT!!! PLEASE READ BEFORE INSTALLATION

- If the unit has recently been transported，please let unit stand still for a minimum of 24 hours before plugging it in.
- Make sure that the unit drops down to desired temperature before loading the unit with product.
- Make sure that there is proper ventilation around the unit in the area where it will operate.
    - You must have at least 6” clearance from the unit to any wall for proper function and ventilation to occur
    - If this ventilation room is not allowed, cooling will not occur and adjustments to your enclosure will need to be made.
    - This unit is vented out the rear bottom and fresh air must be made available for the compressor and refrigerator to cool
- Make sure all accessories are installed (i.e. shelves, shelf clips) before plugging the unit in.
- Please read through the manual in its entirety.

CABINET LOCATION GUIDELINES

- **Install the unit on strong and leveled surfaces**
  Unit may make unpleasant noises if surface is uneven
  Unit may malfunction if surface is uneven
- **Install the unit in a dry, well-ventilated area**
  For best performance, please maintain clearance of 6" on the back of the unit and at least 4” clearance on the sides of the uni
  Unit should be away from direct sunlight
- **Avoid installation in a high humidity and/or dusty area**
  Humidity could cause unit to rust and decrease efficiency of the unit
  Dust collected on condenser coil will cause unit to malfunction. Clean the condenser at least once a month with a brush or clean cloth
- **Avoid placing the unit near heat emitting devices (ex: cooking appliances, radiators, water heaters, or similar devices) and moisture-generating equipment**
  High ambient temperatures will cause the compressor to overwork, leading to higher energy bills and gradual breakdown of the unit

Parts Diagram

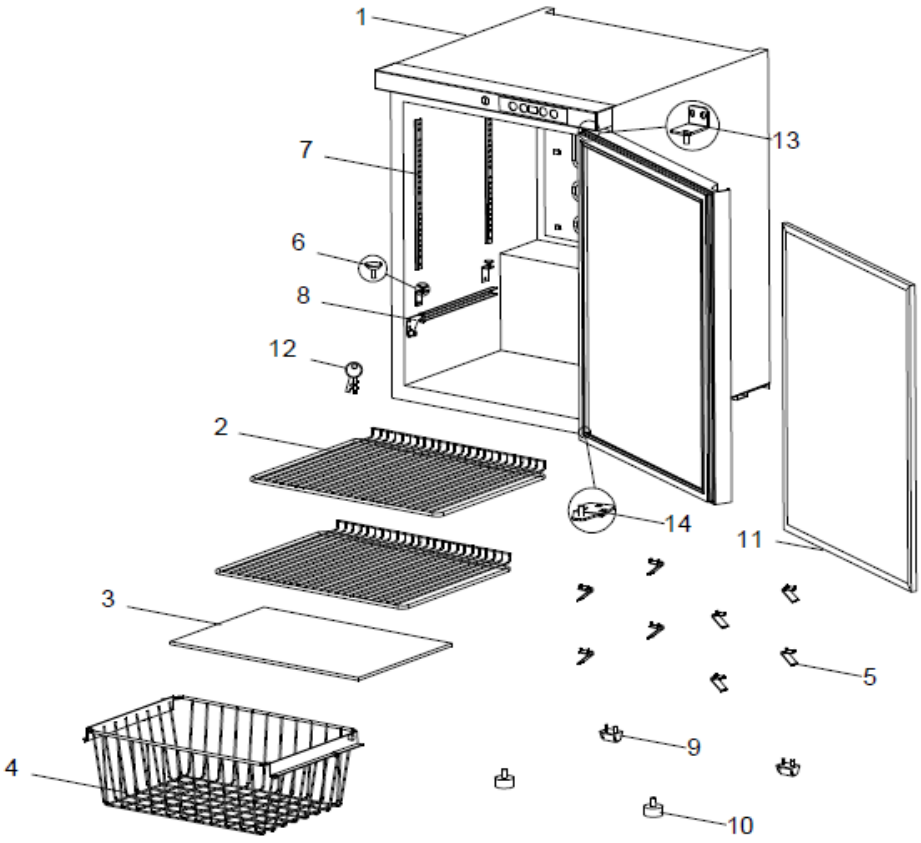

Parts List

Parts Number	Description	Quantity
1	Cabinet	1
2	Upper Shelf	2
3	Glass Shelf	1
4	Basket	1
5	Shelf Support Clip	8
6	Glass Shelf Protective Pad	4
7	Shelf Bracket	4
8	Slide Set	1
9	Caster	2
10	Level Adjuster	2
11	Door Gasket	1
12	Door Key	2
13	Upper Hinge	1
14	Bottom Hinge	1

INSTALLING THE GLASS SHELF

- Open the door. The glass shelf is packed underneath the Refrigerator Basket.
- Take the glass shelf out of the refrigerator and packaging.
- Put the glass shelf onto the Protective Pads.

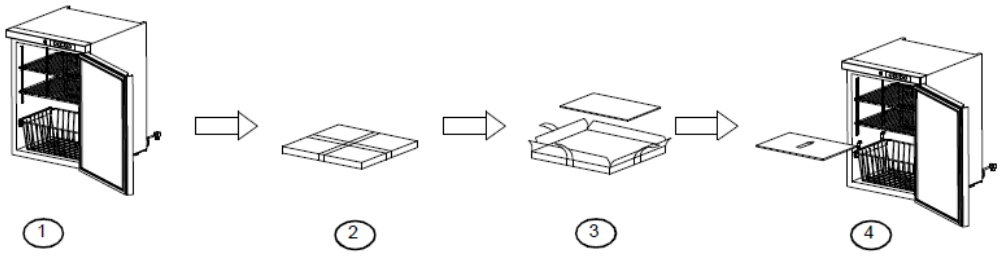

CHANGING THE DOOR'S SWING

The direction the door opens can be changed by placing the alternate upper hinge (that came with the unit when purchased) on the alternate top corner. To remove the upper hinge, you will need to remove the six screws on the Control Panel to gain access to the hinge. In regards to the bottom hinge, you just need to remove the three bolts that are holding this hinge to the refrigerator and re-locate it to the new side. The bottom hinge is universal, while the top is not. Place the hinges and door to your preference. Reinstall the Control Panel and Hardware.

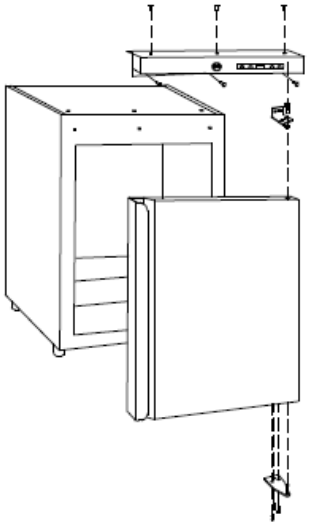

Door Swings to Right

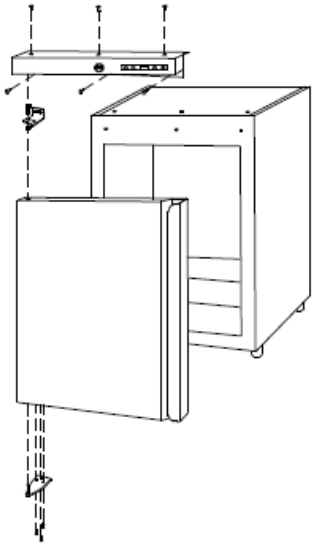

Door Swings to Left

CONTROL PANEL

■ Temperature Control: Press SET. Choose ▲ or ▼ to adjust the temperature. Holding the directional button for at least 2 seconds quickly change the temperature displayed. The temperature will be set and show on the display if not pressing the direction for 6 seconds.

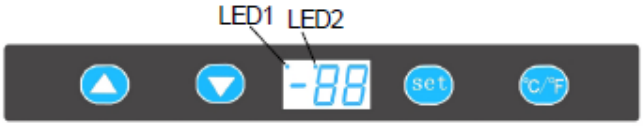

■ Indicator Light: when the compressor is on and when the temperature is set, the light will keep on.

■ Interior Light: When the refrigerator door is open, the interior light will stay on. When the refrigerator door is closed, the light will go off.

■ ºC/ºF Conversion: When you press the ºC/ºF button, you can choose whether the temperature is displayed in Celsius or Fahrenheit. When LED2 is on, the temperature is displayed in ºF. When LED2 is off, the temperature is displayed in ºC.

■ Restoring to Default Settings: Press ▲ twice, and then put your fingers on ▼ for 6 seconds. When the display light blinks, it means all settings have been reset. It will return to normal status in 6 seconds.

ELECTRICAL

Please ensure that the required voltage of the compressor is being supplied at all times. Low or high voltage can detrimentally affect the refrigeration unit. All units should be plugged into a grounded and properly-sized electrical outlet with appropriate overcurrent protection. Please refer to the electrical requirements on the nameplate. Please make sure that your unit has its own dedicated outlet. Do not use an extension cord.

SAFETY / WARNING

Please pay close attention to the safety notices in this section. Disregarding these notices may lead to serious injury and/or damage to the unit.

ATTENTION

- To minimize shock and fire hazards, be sure not to overload outlet. Please designate one outlet for your unit.
- Do not use extension cords.
- Do not put your hands under the unit when the unit is required to be moved.
- When the unit is not in use for a long period of time, please unplug the unit from the outlet.
- After unplugging the unit, wait at least 10 minutes before re-plugging it. Failure to do so could cause damage to the compressor.

UNPLUG CORD

- To minimize shock and fire hazards, please do not plug or unplug the cord with wet hands.
- During maintenance and cleaning, please unplug the unit.

PROPER GROUDING REQUIRED

- To minimize shock and fire hazards, make sure that the unit is properly grounded.

PROHIBITION

- Do not attempt to remove or repair any component unless instructed by factory.
- Make sure that the unit is not resting on or against the electrical cord and plug.
- To minimize personal injury, do not hang on the doors.
- Do not store any flammable and explosive gas or liquids inside the unit.
- Do not attempt to alter or tamper with the electrical cord.

REGULAR MAINTENANCE

CLEANING THE CONDENSER COIL

- For efficient operation, it is important that the condenser surface be kept free of dust, dirt, and lint.
- We recommend cleaning the condenser coil and fins at least once per

month.

- Clean with a commercial condenser coil cleaner, available from any kitchen equipment retailer. Brush the condenser fins from top to bottom, not side to side.
- After cleaning, straighten any bent condenser fins with a fin comb.

CLEANING THE FAN BLADES AND MOTOR

If necessary, clean the fan blades and motor with a soft cloth. If it is necessary to wash the fan blades, cover the fan motor to prevent moisture damage.

CLEANING THE INTERIOR OF UNIT

- When cleaning the cabinet interior, use a solvent of warm water and mild soap.
- Do not use steel wool, caustic soap, abrasive cleaners, or bleach that may damage the stainless steel surface.
- Wash door gaskets on a regular basis, preferably weekly. Simply remove door gasket from the frame of the door, soak in warm water and soap for thirty (30) minutes, dry with soft cloth, and replace.
- Check door gaskets for proper seal after they are replaced.
- Periodically remove the shelves and pilasters from the unit and clean them with mild soap and warm water. To remove the pilasters, first remove the shelves and shelf brackets. Then, simply lift the pilaster up and out.

WARNING

Disconnect power cord before cleaning any parts of the unit.

TROUBLE SHOOTING

Before requesting any service on your unit, please check the following points. Please note that this guide serves only as a reference for solutions to common problems.

SYMPTOM	POSSIBLE CAUSE	CORRECTIVE ACTION
Compressor not running.	Fuse blown or circuit breaker tripped.	Replace fuse or reset circuit breaker.
	Power cord unplugged.	Plug in power cord.
	Thermostat set too high.	Set thermostat to lower temperature.
Condensing unit runs for long periods of time.	Excessive amount of warn product placed in cabinet.	Allow adequate time for product to cool down.
	Prolonged door opening or door ajar.	Ensure doors are closed when not in use. Avoid opening doors

		for long periods of time.
	Door gasket(s) not sealing properly.	Ensure gaskets are snapped in completely. Remove gasket and wash with soap and water. Check condition of gasket and replace if necessary.
	Dirty condenser coil.	Clean the condenser coil.
	Evaporator coil iced over.	Unplug unit and allow coil to defrost. Make sure thermostat is not set too cold. Ensure that door gasket(s) are sealing properly.
Cabinet temperature is too warm.	Thermostat set too warm.	Set thermostat to lower temperature.
	Blocking air flow.	Re-arrange product to allow for proper air flow. Make sure there is at least four inches of clearance from evaporator.
	Excessive amount of warm product placed in cabinet.	Allow adequate time for product to cool down.
	Fuse blown or circuit breaker tripped.	Replace fuse or reset circuit breaker.
	Dirty condenser coil.	Clean the condenser coil.
	Prolonged door opening or door ajar.	Ensure doors are closed when not in use. Avoid opening doors for long periods of time.
	Evaporator coil iced over.	(see above)
Cabinet is noisy.	Loose part(s).	Locate and tighten loose part(s).
	Tubing vibration.	Ensure tubing is free from contact with other tubing or components.

At Coyote we're the experts on this unit and trained to help you with:
Assembly questions
Refrigerator operation
Replacement of damaged or missing parts
Visit www.coyoteoutdoor.com or call: 1-855-520-1559
Monday –Friday 8:00am-4:30pmCST

Manufacturer:

Coyote Outdoor Living, Inc

PO Box 601603

Dallas TX 75360-1603

Coyote Limited Warranty

Coyote will warrant to the original purchaser of this product that it will be free of defects in material and craftsmanship for the set time frame listed below, when the product is assemble and used under according to this manual:

All Parts – 1 Year Limited Warranty

Coyote will require a proof of purchase to validate the date of purchase. Therefore, you should save your receipt in a safe and accessible place, in case it is required as a proof of purchase.

This Limited Warranty is limited to the replacement of parts at Coyote's discretion, that prove to be defective under normal use and service. Furthermore, Coyote may require the return of the damaged part(s) for examination before issuing replacement parts. If Coyote would like to have the damaged product returned first, the shipping charges must be paid by the customer. No returns or shipments back will be accepted without prior Coyote authorization.

Upon receipt of the damaged parts and to Coyote's satisfaction, if the original part is proven defective, Coyote may elect to approve the claim and issue a replacement part, without charge.

This warranty does not cover any failures or operating difficulties due to abuse, accident, misuse, alteration, misapplication, vandalism, maintenance, improper installation, operation or service, as stated in this manual. Furthermore, this warranty does not cover cosmetic wear from normal use, such as; scratches, dents, corrosion or discoloration caused by weather, heat, chemicals, paint loss, or surface rust. Damage due to severe weather conditions such as hail, hurricanes, earthquakes, tsunami's, tornadoes, an Act of God or terrorism, is not covered by this warranty.

Warranty Restrictions:

This warranty is non-transferable and only applies to the original owner.

This warranty is void if used for a commercial or rental purpose.

This warranty gives you specific legal rights and you may have other rights, which vary from state to state.

For assistance or more information on this products warranty, please contact:
Coyote Customer Service
1-855-520-1559
Monday – Friday 8am – 4:30pm CST